

# Quick Start Guide

## TC ELECTRONIC POLYTUNE 3 MINI

**True Bypass / Buffered Bypass** – Choose between Bypass modes:

Switch configuration	Mode
Both switches set to OFF	True Bypass
Switch 1 set to ON Switch 2 set to OFF position	Buffered Bypass
Both switches set to ON	Buffered Bypass, Display Always On

**Display** - Pick one string for single-string tuning, or strum all of the strings for polyphonic tuning.

**Tuning Mode** - Select between standard "E" or one of the dropped tuning or capo modes. Press and hold to switch between chromatic and strobe mode.

**Power Input** - Connect a 9 V / >100 mA power supply.

**Output**

**Input**

**Footswitch** - Turns the tuner on and off. Press and hold the footswitch to toggle between standard and drop-D tuning.



Visit [tcelectronic.com](http://tcelectronic.com) to download the full manual

**tc electronic**